



Generators

If you are considering a generator for your home or business, please let us know. Bartlett Electric Cooperative is here to help.

Members considering a generator need to meet these requirements:

Work with a licensed and certified professional to find the right generator for your home or business. It is in your best interest to size the unit properly. *****Generators must have a transfer switch connected. The generator switch cannot be installed between the meter and the meter base.*****

Safety is top priority, and we want to ensure the safety of all members, contractors, and employees. Generators improperly installed may back feed electricity on our lines and can severely injure our linemen.

All generators must be installed with a double throw transfer switch. This transfer switch isolates the generator to protect Bartlett Electric Co-op equipment and employees from any electricity back feeding on our lines.

If your licensed electrician requires the temporary disconnection of service to safely install your generator, please call our office (254)527-3551. Any evidence of meter tampering, including a broken meter seal, will result in meter tampering charge of at least \$500.

BEC does not allow in socket transfer switches to be used under any circumstance.

